














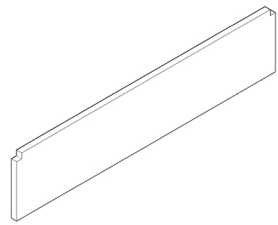
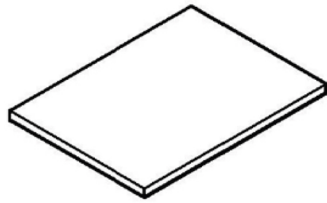
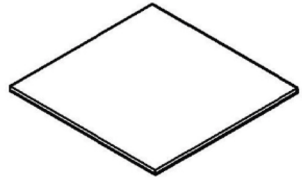
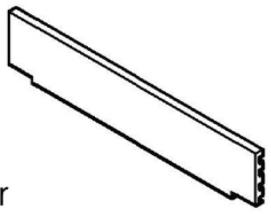
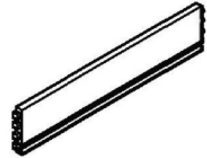
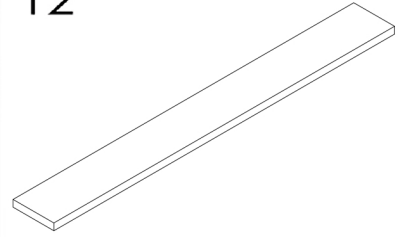











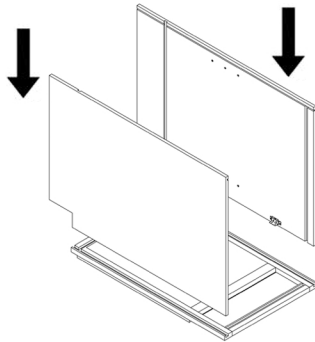
# Part List

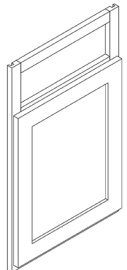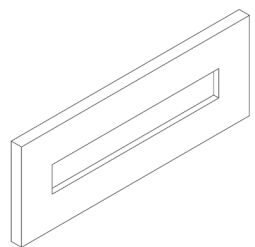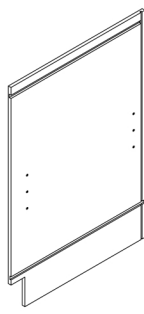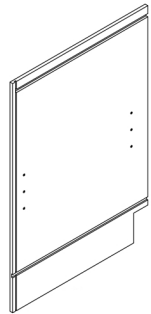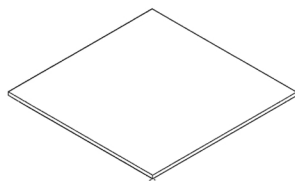No	Picture	Specification	Qty
A		Screw Ø 3/16X1 3/16"	6
B		Screw Ø 1/8"1 1/2"	8
C			6
D		L Bracket	2
E		Drawer Glides	2
F		Glide Connector	2
G		Corner Bracket	4
H		Bumper	6
I		Shelf Clip	4
J			
k			


<p>1</p>  <p>Face Frame Door</p> <p>X1</p>	<p>2</p>  <p>Drawer Front</p> <p>X1</p>	<p>3</p>  <p>Left Side Panel</p> <p>X1</p>
<p>4</p>  <p>Right Side Panel</p> <p>X1</p>	<p>5</p>  <p>Bottom Panel</p> <p>X1</p>	<p>6</p>  <p>Back Panel</p> <p>X1</p>
<p>7</p>  <p>Front Toe kick</p> <p>X1</p>	<p>8</p>  <p>Shelf</p> <p>X1</p>	<p>9</p>  <p>Drawer Bottom</p> <p>X1</p>
<p>10</p>  <p>Drawer Back</p> <p>X1</p>	<p>11</p>  <p>Drawer Sides</p> <p>X2</p>	<p>12</p>  <p>X2</p>

# Assembly instructions


No	Picture	Specification	Qty	No	Picture	Specification	Qty
A		Screw $\varnothing$ 3/16" x 1 3/16"	16	G		Corner Bracket	4
B		Screw $\varnothing$ 1/8" x 1/2"	12	H		Bumper	6
C			6	I		Shelf Clip	4
D		L Bracket	2	J			
E		Drawer Glides	2	K			
F		Glide Connector	2				




**Step1:** Place Face Frame on the floor first. Insert right and left side panel as shown

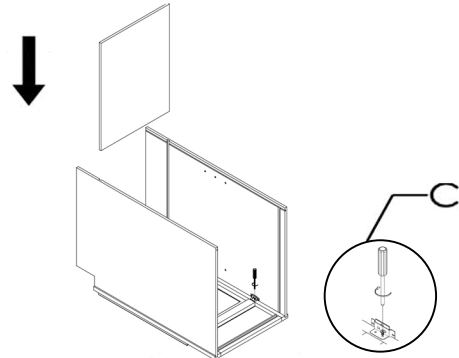


**Step2:** Lock in face frame with side panels with the plastic connector using screws. Insert bottom panel from the

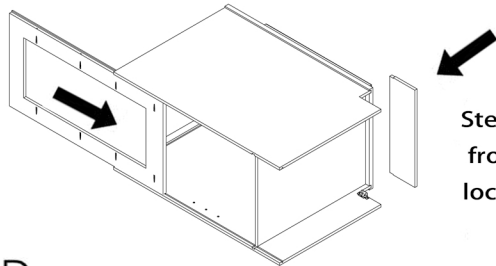


**Step3:** Insert back panel from top to bottom and lock in plastic connector.

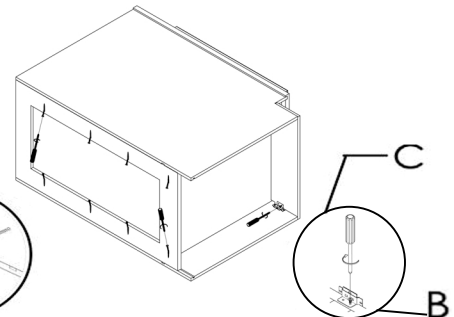


**Step4:** Install foot panel and lock in plastic connector. Use 3/16" x 1-3/16" screws to tighten back panel from the back.

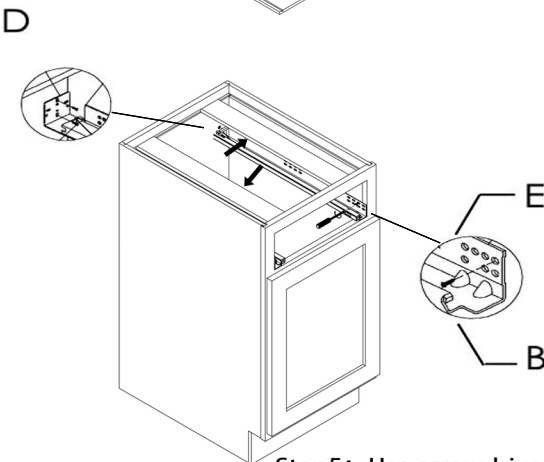


**Step5:** Use screwdriver to lock in drawer glide base. Connect drawer glide to frame using screws provided. Install plastic triangle with screws at top of cabinet as shown.

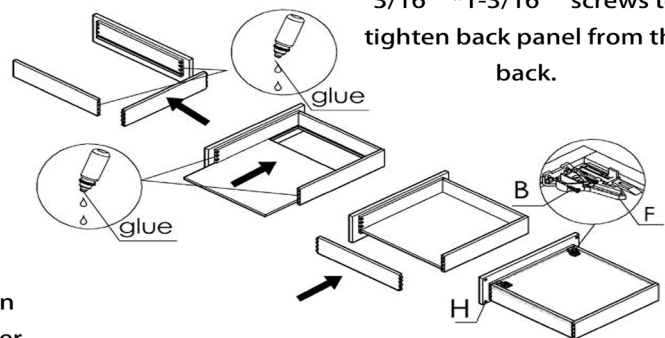

**Step6:** Connect drawer box side panels with glue first. Then insert bottom panel. Install drawer glide on drawer bottom as shown.

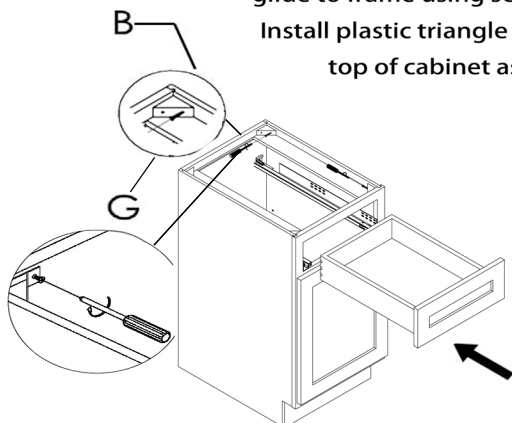

**Step7:** Install plastic triangle at top of cabinet by screws. Push fully assembled drawer in place.

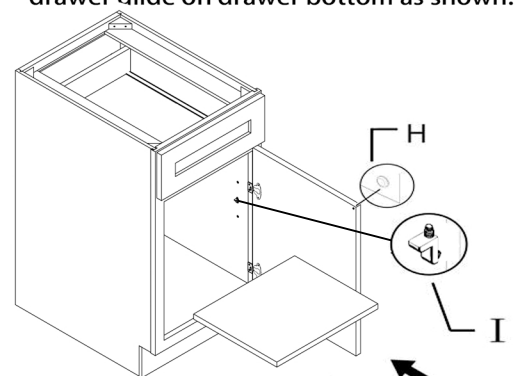

**Step8:** Place shelf holder at ideal location, Place Shelf on top. Stick door-stopper on frame for doors/drawers as shown.